Symptoms	Possible cause	Solution
Motor isn't starting	Not plugged in	Plug in
	Defective socket	Use another Socket
	Fuse has tripped	Replace the fuse
	Extention cord is	Try without an extention cord
	damaged	
	Motorvernet er utløst	La motoren avkjøles i 15 min
	Frozen/frost	Allow the pump, hose, and accessories to
		thaw
The Motor has stopped	Fuse has tripped	Replace the fuse
	Incorrect main voltage	Check the mains voltage, this must
		correspond to the information on the
		type plate
	Engine protection is	Allow the engine to cool for 15 min
	tripped	
Home Fuse is tripping	The circuit fuse is too	Connect to a circuit that is secured
	weak	corresponding to the power of the high
		pressure washer
The engine is running, but there is no pressure	The nozzle is partially	Clean the nozzle
	clogged	
Engine noise is present, but no function	Insufficient mains voltage	Check that the mains voltage corresponds
		to the information on the nameplate
	Too low voltage due to	Check that the extension cable is suitable
	use of extension cable	
	The machine has not	Contact an authorized AVA customer
	been used for a long time	service
	Problems with the auto-	Contact an authorized AVA customer
	stop function	service
Pulsating pressure	·	Let the high-pressure washer run with an
r disaurig pressure	pump	open spray gun, open water tap and with
	pump	the nozzle set to low pressure, until an
		even working pressure is achieved
	Water supply is not	Check if the water connection
	correct	corresponds to the information in the
		technical data. The smallest water hoses that can be used are 1/2 "or Ø 13mm
		that can be used are 1/2 or \$\text{\$\pi\$ 15\times 1\times 1/2}
	The water filter	Clean the water filter
	The water hose is	Lay the water hose straight out
	pinched or folded	
	The high pressure hose is	Remove the high pressure hose extension
	too long	
Even but too low pressure Note: Certain	Worn nozzle	Replace nozzle
accessories cause low pressure	Worn start / stop valve	Press the extractor 5 times in succession
The engine runs but the pressure is limited or no working pressure	Water is not connected	Water is connected
	Clagged filter	Cleaning the filter
	Clogged filter Sealed nozzle	Cleaning the filter Clean the nozzle
	Sealed HOZZIE	Clean the nozzie

